

## PRESENTATION REMOTE CONTROL

### MODEL POA-RCKIT04

## Operating Instruction

 
#### Federal Communication Commission Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The use of shielded cable is required to comply with class B limits in Subpart B of Part 15 of FCC Rules. Do not make any changes or modifications to the equipment unless otherwise specified in the instructions. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Model Number	: POA-RCKIT04
Trade Name	: Sanyo
Responsible party	: SANYO FISHER COMPANY
Address	: 21605 Plummer Street, Chatsworth, California 91311
Telephone No.	: (818)998-7322



**NOTE:** This symbol mark and recycle system are applied only to EU countries and not applied to the countries in the other area of the world.



Your SANYO product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste.

Please dispose of this equipment at your local community waste collection/recycling centre. In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!



#### Voor de klanten in Nederland

Bij dit produkt zijn batterijen geleverd.  
Wanneer deze leeg zijn, moet u ze niet weggooien maar inleveren als KCA.



 
The CE Mark is a Directive conformity mark of the European Community (EC).

## Installation

- 1 Connect the computer's monitor output terminal to the projector's input terminal with a computer cable.
- 2 Connect the Presentation Remote Receiver to the USB port of your computer.
- 3 Install the batteries into the Remote Control by following the instructions below.


✓ **Note:**

- The Presentation Remote Receiver can be connected to a standard USB port only.
- Some computer settings may have to be changed in order for the mouse function to be used. Refer to your computer's owner's manual for details.
- When switching the remote control code of the projector and the remote control, that of the presentation remote control also needs to be switched. To switch the code, press and hold both the MENU and IMAGE buttons for more than 10 seconds. (For details, refer to the owner's manual of the projector.)

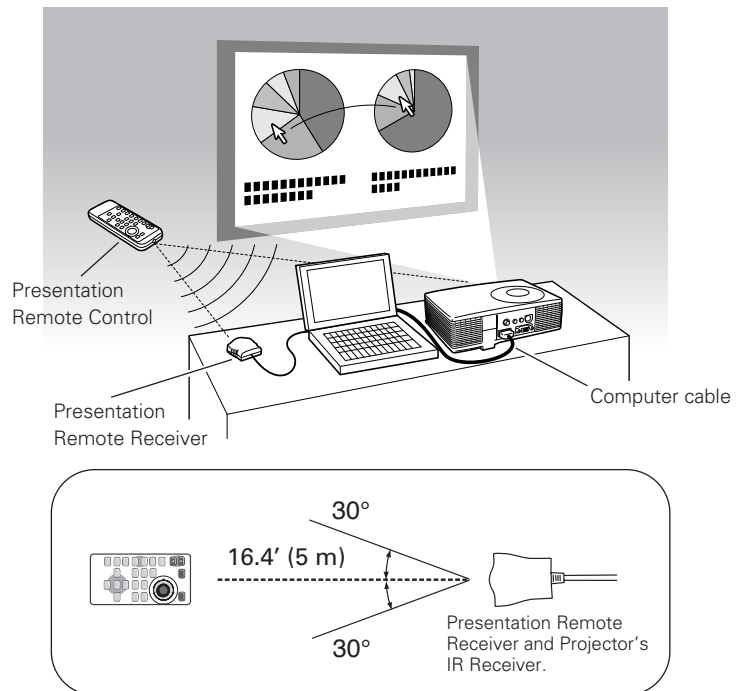


## Remote Control Battery Installation

 - 1 Open the battery compartment lid.

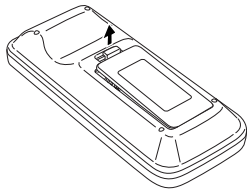

 
- 2 Install new batteries into the compartment.

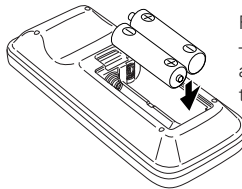

**Two AAA size batteries**

For correct polarity (+ and -), be sure battery terminals are in contact with pins in the compartment.

 - 3 Replace the compartment lid.

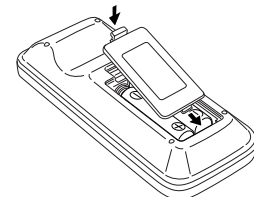


To insure safe operation, please observe the following precautions:

- Use (2) AAA or LR03 type alkaline batteries.
- Always replace batteries in sets.
- Do not use a new battery with a used battery.
- Avoid contact with water or liquid.
- Do not expose the remote control to moisture or heat.
- Do not drop the remote control.
- If the battery has leaked on the remote control, carefully wipe the case clean and install new batteries.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.

## Names and Functions of Each Button

 Presentation Remote Control performs the function of a wireless mouse to control the mouse cursor on the computer. For convenience while giving presentations, some buttons controlling the projector are also provided.

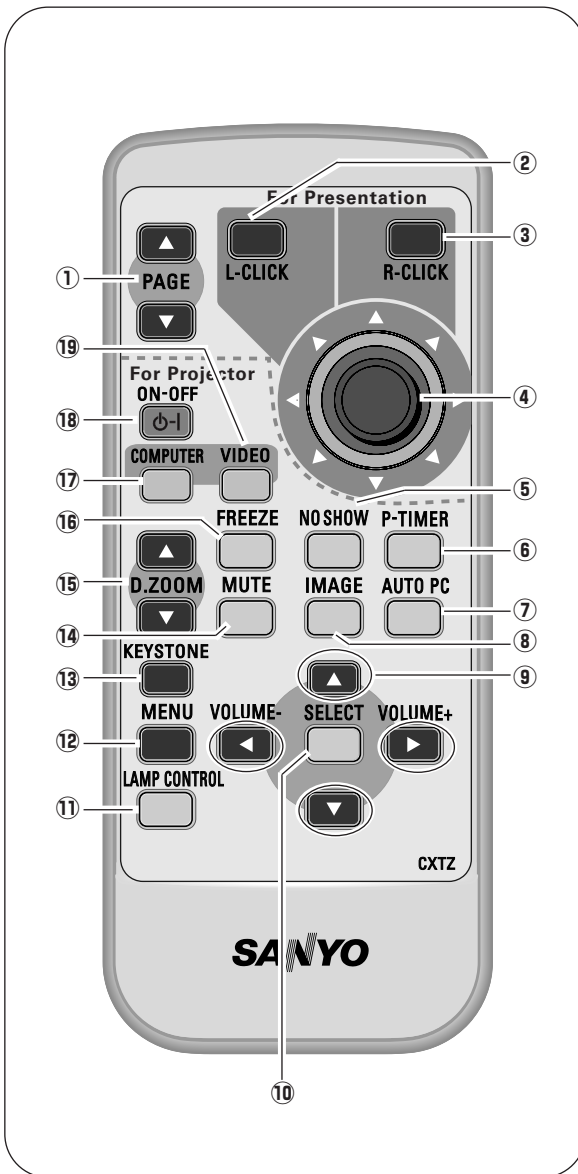

✓ **Note:**

- The LAMP CONTROL button is not applicable to the model PLC-SW30/PLC-SW35 and PLC-XU41/PLC-XU47/PLC-XU48.
- For detailed operations, refer to the projector's owner's manual.

### For Presentation

Aim the remote control at the Presentation Remote Receiver.

- ① **PAGE ▲▼ buttons**  
Scroll back and forth the pages on the screen when giving presentations.
- ② **L-CLICK button**  
Act as the left button on a computer mouse.  
To drag a selected item, press and hold the L-CLICK button and move the cursor with the Cursor button.
- ③ **R-CLICK button**  
Act as the right button on a computer mouse.
- ④ **Cursor button**  
Act as the cursor on a computer mouse.

### For Projector

Aim the remote control at the IR Receiver of the projector.

- ⑤ **NO SHOW button**  
Temporarily turn off the image on the screen.
- ⑥ **P-TIMER button**  
Operate the P-timer function.
- ⑦ **AUTO PC button**  
Automatically adjust the computer image to its optimum settings.
- ⑧ **IMAGE button**  
Select the image level.
- ⑨ **Point ▲▼ ◀▶ ( VOLUME + / - ) buttons**
  - Select an item or adjust the value in the On-Screen Menu.
  - Pan the image in the Digital zoom + mode.
  - Adjust the volume level. (Point ◀▶ buttons)
- ⑩ **SELECT button**
  - Execute the selected item.
  - Expand or compress the image in the Digital zoom mode.
- ⑪ **LAMP CONTROL button**  
Select the lamp mode.
- ⑫ **MENU button**  
Open or close the On-Screen Menu.
- ⑬ **KEystone button**  
Correct keystone distortion.
- ⑭ **MUTE button**  
Mute the sound.
- ⑮ **D.ZOOM ▲▼ buttons**  
Zoom in and out the images.
- ⑯ **FREEZE button**  
Freeze the picture.
- ⑰ **COMPUTER button**  
Select COMPUTER input source.
- ⑱ **POWER ON-OFF button**  
Turn the projector on or off.
- ⑲ **VIDEO button**  
Select VIDEO input source.

## Specifications

---

### Remote Control Unit

<b>Power Source</b>	AAA or LR03 type x 2 (included)
<b>Operating Range</b>	16.4' (5 m) / $\pm 30^\circ$
<b>Dimensions</b>	2.0" (W) x 0.91" (H) x 4.8" (D) (51.5 mm x 23.2 mm x 123 mm)
<b>Net Weight</b>	2.54 oz (72 g) (including batteries)

### Remote Control Receiver

<b>Transmission Signals</b>	Infrared
<b>Compatible Computers</b>	Windows • Windows 98 / 2000/ Me / XP * Compatible with only full versions of Windows. (Upgraded version cannot be used.) Macintosh • Mac OS 9.1 or later.
<b>Connector</b>	USB Type B
<b>Net Weight</b>	1.6 oz (45 g)
<b>Cable Length</b>	3.3' (1 m)